

1	APPLICATION	3
2	DESCRIPTION (FIG A)	3
3	PACKAGE CONTENT LIST.....	3
4	SYMBOLS	4
5	GENERAL POWER TOOL SAFETY WARNINGS	4
5.1	<i>Working area.....</i>	<i>4</i>
5.2	<i>Electrical safety</i>	<i>4</i>
5.3	<i>Personal safety</i>	<i>5</i>
5.4	<i>Power tool use and care.....</i>	<i>5</i>
5.5	<i>Service.....</i>	<i>5</i>
6	ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND CHARGERS	6
6.1	<i>Batteries</i>	<i>6</i>
6.2	<i>Chargers.....</i>	<i>6</i>
7	ASSEMBLY	6
7.1	<i>Selecting correct socket</i>	<i>6</i>
7.2	<i>Installing or removing socket (Fig. 1).....</i>	<i>6</i>
8	OPERATION.....	7
8.1	<i>Charging the battery pack (Fig. 2)</i>	<i>7</i>
8.1.1	<i>Charging indication</i>	<i>7</i>
8.2	<i>Inserting and removing the battery (Fig. 3).....</i>	<i>7</i>
8.3	<i>Switch on/off (Fig. 4).....</i>	<i>7</i>
8.3.1	<i>Switch lock.....</i>	<i>7</i>
8.3.2	<i>Direction of rotation (Fig. 5).....</i>	<i>7</i>
8.3.3	<i>Variable speed.....</i>	<i>7</i>
9	CLEANING AND MAINTENANCE	8
9.1	<i>Cleaning</i>	<i>8</i>
10	TECHNICAL DETAILS.....	8
11	NOISE.....	8
12	WARRANTY	9

13	ENVIRONMENT	9
14	DECLARATION OF CONFORMITY	10

CORDLESS IMPACT SCREWDRIVER 18V POWX0073LI

1 APPLICATION

Your cordless impact screwdriver is intended to loosen/tighten screws and bolts as well as for tightening and loosening nuts within the respective range of dimension. It is not designed for commercial use.



WARNING! Read this manual and general safety instructions carefully before using the appliance, for your own safety. Your power tool should only be passed on together with these instructions.

2 DESCRIPTION (FIG A)

- | | |
|----------------------|---------------------------|
| 1. Clamping sleeve | 7. ON/OFF switch |
| 2. Hex-shaped socket | 8. Charger |
| 3. Reverse switch | 9. Double sided screw bit |
| 4. Handle | 10. Hand strap |
| 5. Release button | 11. LED work-light |
| 6. Battery pack | |

3 PACKAGE CONTENT LIST

- Remove all packaging materials.
- Remove remaining packing and package inserts (if included).
- Check that the package contents are complete.
- Check the appliance, the power cord, the power plug and all accessories for transportation damage.
- Keep the packing materials as far as possible till the end of the warranty period. Dispose it into your local waste disposal system afterwards.



WARNING: Packaging materials are not toys! Children must not play with plastic bags! Danger of suffocation!




 




- | | |
|-------------|--------------------------------------|
| 1 x machine | 1 x adaptor hex to socket |
| 1 x manual | 1 x double sided screw bit |
| 1 x charger | 3 x sockets (8/10/13 mm) |
| 1 x battery | 6 x 25 mm bits (PH1/2/3 and PZ1/2/3) |



If any parts are missing or damaged, please contact your dealer.

4 SYMBOLS

In this manual and/or on the machine the following symbols are used:

	Denotes risk of personal injury or damage to the tool.		In accordance with essential requirements of the European directive(s)
	Read manual before use		"Class II - The machine is double insulated; Earthing wire is therefore not necessary (only for charger)
	Do not expose charger and battery pack to water		Ambient temperature 40°C max. (only for battery)
	Do not incinerate battery pack or charger		Use battery and charger only in closed rooms

5 GENERAL POWER TOOL SAFETY WARNINGS

Read all safety warnings and instructions. Failure to heed warnings and follow instructions may result in electric shock, fire and/or serious injury. Keep safety warnings and instructions for future reference. The term "power tool" in the safety warnings refers to your mains-operated (corded) power tool or battery- operated (cordless) power tool.

5.1 Working area

- Keep working area clean and well lit. Untidy and dark areas can lead to accidents.
- Do not operate power tools in potentially explosive surroundings, for example, in the presence of inflammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders at a distance when operating a power tool. Distractions can cause you to lose control of it.

5.2 Electrical safety

- Always check that the power supply corresponds to the voltage on the rating plate.
- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use adapter plugs with earthed power tools. Unmodified plugs and matching outlets will reduce the risk of an electric shock.
- Avoid body contact with earthed surfaces such as pipes, radiators, kitchen ranges and refrigerators. There is an increased risk of an electric shock if your body is earthed.
- Do not expose power tools to rain or wet conditions. If water gets inside a power tool, it will increase the risk of an electric shock.
- Do not damage the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of an electric shock.
- When operating a power tool outdoors, use an extension cable suitable for outdoor use. Using a cord suitable for outdoor use reduces the risk of an electric shock.
- If operating a power tool in a damp location is unavoidable, use a power supply protected by a residual current device (RCD). Using an RCD reduces the risk of an electric shock.

5.3 *Personal safety*

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool when you are tired or under the influence of drugs, alcohol or medication. A moment of inattention when operating a power tool may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Using safety equipment such as a dust mask, non-skid safety shoes, a hard hat, or hearing protection whenever it is needed will reduce the risk of personal injury.
- Avoid accidental starts. Ensure the switch is in the off position before inserting the plug. Carrying power tools with your finger on the switch or plugging in power tools when the switch is in the on position makes accidents more likely.
- Remove any adjusting keys or spanners before turning on the power tool. A spanner or key left attached to a rotating part of the power tool may result in personal injury.
- Do not reach out too far. Keep your feet firmly on the ground at all times. This will enable you retain control over the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from the power tool. Loose clothes, jewellery or long hair can become entangled in the moving parts.
- If there are devices for connecting dust extraction and collection facilities, please ensure that they are attached and used correctly. Using such devices can reduce dust-related hazards.

5.4 *Power tool use and care*

- Do not expect the power tool to do more than it can. Use the correct power tool for what you want to do. A power tool will achieve better results and be safer if used in the context for which it was designed.
- Do not use the power tool if the switch cannot turn it on and off. A power tool with a broken switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store power tools, when not in use, out of the reach of children and do not allow people who are not familiar with the power tool or these instructions to operate it. Power tools are potentially dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or jammed moving parts, breakages or any other feature that might affect the operation of the power tool. If it is damaged, the power tool must be repaired. Many accidents are caused by using poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to jam and are easier to control.
- Use the power tool, accessories and cutting tools, etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work which needs to be done. Using a power tool in ways for which it was not intended can lead to potentially hazardous situations.

5.5 *Service*

- Your power tool should be serviced by a qualified specialist using only standard spare parts. This will ensure that it meets the required safety standards.

6 ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES AND CHARGERS

6.1 Batteries

- Never attempt to open for any reason.
- Do not store in locations where the temperature may exceed 40 °C.
- Charge only at ambient temperatures between 4 °C and 40 °C.
- Charge only using the charger provided with the tool.
- When disposing of batteries, follow the instructions given in the section "Protecting the environment".
- Do not cause short circuits. If connection is made between the positive (+) and negative (-) terminal directly or via accidental contact with metallic objects, the battery is short circuited and an intense current will flow causing heat generation which may lead to casing rupture or fire.
- Do not heat. If batteries are heated to above 100 °C, sealing and insulating separators and other polymer components may be damaged resulting in electrolyte leakage and/or internal short circuiting leading to heat generation causing rupture or fire. Moreover do not dispose of the batteries in fire, explosion and/or intense burning may result.
- Under extreme conditions, battery leakage may occur. When you notice liquid on the battery, proceed as follows:
 - Carefully wipe the liquid off using a cloth. Avoid skin contact.
 - In case of skin or eye contact, follow the instructions below:
 - ✓ Immediately rinse with water. Neutralize with a mild acid such as lemon juice or vinegar.
 - ✓ In case of eye contact, rinse abundantly with clean water for at least 10 minutes. Consult a physician.



Fire hazard! Avoid short-circuiting the contacts of a detached battery. Do not incinerate the battery.

6.2 Chargers

- Use the charger provided with the tool only to charge the battery
- Never attempt to charge non-rechargeable batteries.
- Have defective cords replaced immediately.
- Do not expose to water.
- Do not open the charger.
- Do not probe the charger.
- The charger is intended for indoor use only.

7 ASSEMBLY

7.1 Selecting correct socket

Always use the correct size socket for bolts and nuts. An incorrect size socket will result in inaccurate and inconsistent fastening torque and /or damage to the bolt or nut. Refer to accessories section for socket size.

7.2 Installing or removing socket (Fig. 1)

- Always be sure that the tool is switched off and the battery pack is removed before installing or removing the socket.
- To install the socket, push it onto the anvil of the tool until it locks into place. To remove the socket, simply pull it off.

8 OPERATION

8.1 Charging the battery pack (Fig. 2)

The battery pack for this tool is supplied in a low charge condition to prevent possible problems, therefore, you have to charge the battery before first use.



Note: Batteries will not reach full charge the first time they are charged. Allow several cycles for the item to fully charge. The battery should only be charged indoors.

After normal use, about 1 hour of charging time is required for the battery to be fully charged. The battery pack will become slightly warm while charging, this is normal and does not indicate a problem.

Do not place the charger in an area of extreme heat or cold. Best is at normal room temperature.

8.1.1 Charging indication

- The charger has 2 LED lights (red and green).
- Slide the battery pack in the charger as shown in fig. 2. Make sure there is proper contact with the charger.
- When charging the green is constantly lit and the red is flashing.
- When fully charged both lights will be constantly lit.

8.2 Inserting and removing the battery (Fig. 3)

- Remove the battery pressing the battery latches and at the same time pull the battery pack off.
- To insert the battery, push the battery pack onto the contacts of the tool.

8.3 Switch on/off (Fig. 4)

- The impact screwdriver is started and stopped by depressing and releasing the ON/OFF switch trigger (7).
- This impact screwdriver is equipped with an electric brake, when the ON/OFF switch trigger (7) is released completely, the chuck stops immediately.

8.3.1 Switch lock

- The ON/OFF switch trigger (7) can be locked if the reverse switch (3) is in the center position. (Fig. 5)
- This helps to reduce the possibility of accidental starting when not in use.

8.3.2 Direction of rotation (Fig. 5)

- To select forward rotation, release the on/off switch trigger (7) and push the reverse switch (3) to left side of the tool.
- To select reverse rotation, push the reverse switch (3) to right side of the tool.
- When the reverse switch (3) is in center position, the ON/OFF switch trigger (7) is locked.

8.3.3 Variable speed

This tool has a variable speed ON/OFF switch trigger (7) that delivers higher speed and torque with increased trigger pressure.

Speed is controlled by the amount of pressure on the ON/OFF switch trigger (7).

9 CLEANING AND MAINTENANCE

9.1 *Cleaning*

- Keep the ventilation slots of the machine clean to prevent overheating of the engine.
- Regularly clean the machine housing with a soft cloth, preferably after each use.
- Keep the ventilation slots free from dust and dirt.
- If the dirt does not come off use a soft cloth moistened with soapy water.



Never use solvents such as petrol, alcohol, ammonia water, etc. These solvents may damage the plastic parts.

10 TECHNICAL DETAILS

Model nr.	POWX0073LI
Rated voltage (direct current)	18V
Rotation speed	0-2300 min-1
Impact rate	0-3000 min-1
Charging time	+/-1 hour
Battery type	1500mAh Li-Ion
Charger rated voltage	230V
Charger frequency	50Hz
Socket type	1/4"
Max. torque	80Nm

11 NOISE

Noise emission values measured according to relevant standard. (K=3)

Acoustic pressure level LpA	99 dB(A)
Acoustic power level LwA	110 dB(A)



ATTENTION! Wear hearing protection when sound pressure is over 85 dB(A).

aw (Vibration)	Max 18,2m/s ²	K = 1,5 m/s ²
----------------	--------------------------	--------------------------

12 WARRANTY

- This product is warranted for a 36-month period effective from the date of purchase by the first user.
- This warranty covers all material or production flaws excluding : batteries, chargers, defective parts subject to normal wear & tear such as bearings, brushes, cables, and plugs, or accessories such as drills, drill bits, saw blades, etc. ; damage or defects resulting from maltreatment, accidents or alterations; nor the cost of transportation.
- Damage and/or defects resulting from inappropriate use also do not fall under the warranty provisions.
- We also disclaim all liability for any bodily injury resulting from inappropriate use of the tool.
- Repairs may only be carried out by an authorised customer service centre for Powerplus tools.
- You can always obtain more information at the number 00 32 3 292 92 90.
- Any transportation costs shall always be borne by the customer, unless agreed otherwise in writing.
- At the same time, no claim can be made on the warranty if the damage of the device is the result of negligent maintenance or overload.
- Definitely excluded from the warranty is damage resulting from fluid permeation, excessive dust penetration, intentional damage (on purpose or by gross carelessness), inappropriate usage (use for purposes for which the device is not suitable), incompetent usage (e.g. not following the instructions given in the manual), inexperienced assembly, lightning strike, erroneous net voltage. This list is not exhaustive.
- Acceptance of claims under warranty can never lead to the prolongation of the warranty period nor commencement of a new warranty period in case of a device replacement.
- Devices or parts which are replaced under the warranty therefore remain the property of Varo NV.
- We reserve the right to reject a claim whenever the purchase cannot be verified or when it is clear that the product has not been properly maintained. (Clean ventilation slots, carbon brushes serviced regularly, etc.).
- Your purchase receipt must be kept as proof of date of purchase.
- Your appliance must be returned undismantled to your dealer in an acceptably clean state, (in its original blow-moulded case if applicable to the unit), accompanied by proof of purchase.
- Your tool must be charged at least 1x per month to ensure optimal operation of this tool.

13 ENVIRONMENT



Should your appliance need replacement after extended use, do not dispose of it with the household refuse, but in an environmentally safe way.

Waste produced by electrical machine items should not be handled like normal household rubbish. Please recycle where recycle facilities exist. Check with your Local Authority or retailer for recycling advice.

BATTERY PACK

This product contains Li-ion. To preserve natural resources, please recycle or dispose of batteries properly. Local, state or federal laws may prohibit disposal of Li-ion batteries in ordinary trash. Consult you local waste authority for information regarding available recycling and/or disposal options.

14 DECLARATION OF CONFORMITY



VARO N.V. - Joseph Van Instraat 9 - BE2500 Lier - BELGIUM, declares that,
Product: Cordless impact screwdriver
Trade mark: POWERplus
Model: POWX0073LI

is in conformity with the essential requirements and other relevant provisions of the applicable European Directives, based on the application of European harmonized standards. Any unauthorized modification of the apparatus voids this declaration.

European Directives (including, if applicable, their amendments up to the date of signature);
2011/65/EU
2006/42/EC
2004/108/EC

European harmonized standards (including, if applicable, their amendments up to the date of signature);
EN60745-1 : 2009
EN60745-2-2 : 2010
EN55014-1 : 2006
EN55014-2 : 1997

Keeper of the Technical Documentation : Philippe Vankerkhove, VARO – Vic. Van Rompuy N.V.

The undersigned acts on behalf of the company CEO,

Philippe Vankerkhove
Regulatory Affairs – Compliance Manager
12/08/2013